


Typical for:

- ▶ Eclipse
- ▶ Travel'r
- ▶ Longitude
- ▶ Altitude
- ▶ Compass

Arm information is located on the inside of the lower arm channel.

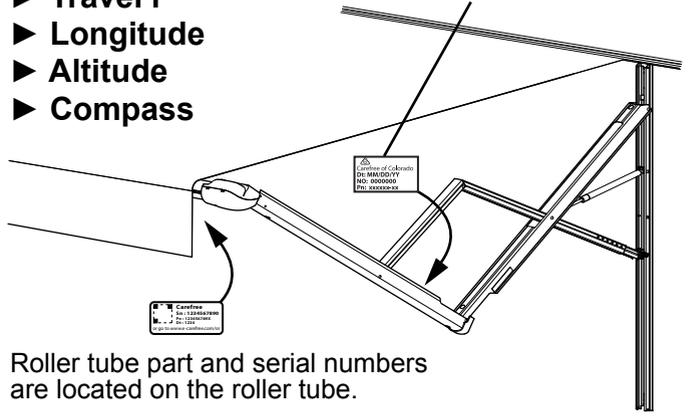


Roller tube part and serial numbers are located on the roller tube.

Typical for:

- ▶ Fiesta
- ▶ Pioneer

Arm information is located on the inside of the lower arm channel.

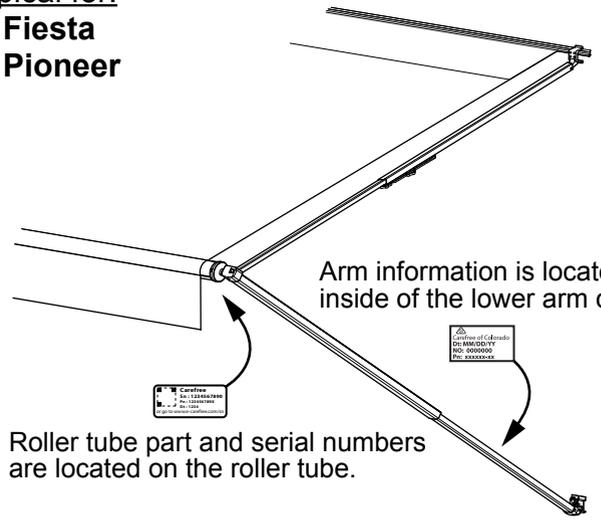


Roller tube part and serial numbers are located on the roller tube.

Typical for:

- ▶ Manual OtD
- ▶ Truckin Awn


Arm information is located on the inside of the lower arm channel.

Roller tube part and serial numbers are located on the roller tube.

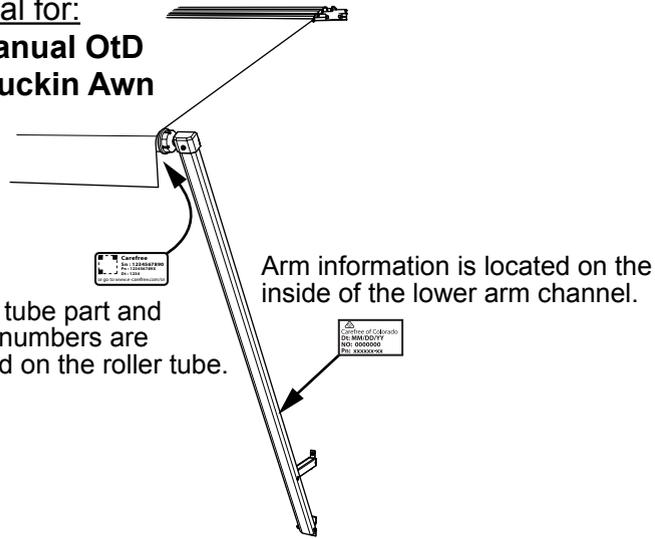


▶ SL Window

Roller tube part and serial numbers are located on the roller tube.

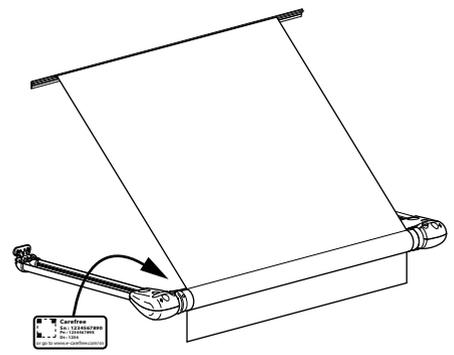

▶ Latitude


Roller tube part and serial numbers are located on the roller tube.

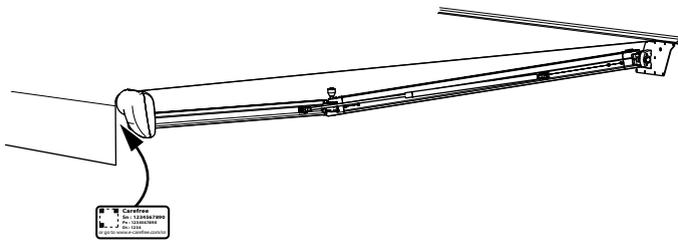

Typical for:

- ▶ Apex
- ▶ Apex 2-Stage
- ▶ Paramount


Serial# / Part# Located on the Rear Outside Case on Motor Side

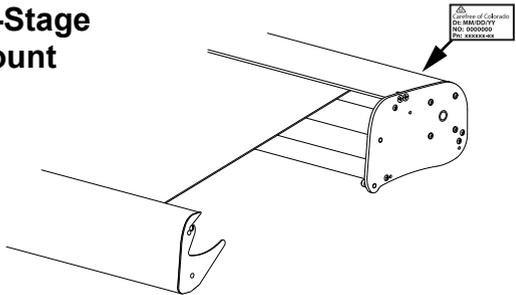

Typical for:

- ▶ Mirage
- ▶ Mirage 2-Stage


Serial# / Part# Located Inside Case on Motor Side

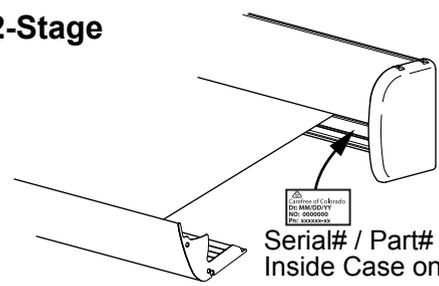

Typical for:

- ▶ Freedom RM
- ▶ Freestyle RM


Serial# / Part# Located Inside the Right End of Lead Rail

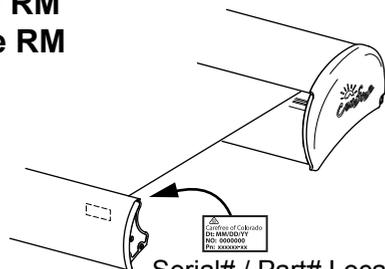

Typical for:

- ▶ Freedom WM
- ▶ Freestyle WM
- ▶ Freedom WMNL
- ▶ Freedom OtD


Serial# / Part# Located Inside the Left End of Case

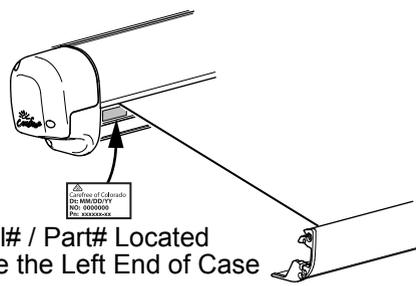

Typical for:

- ▶ Marquee Window
- ▶ Marquee OtD


Serial# / Part# Located Inside the Right End of Lead Rail

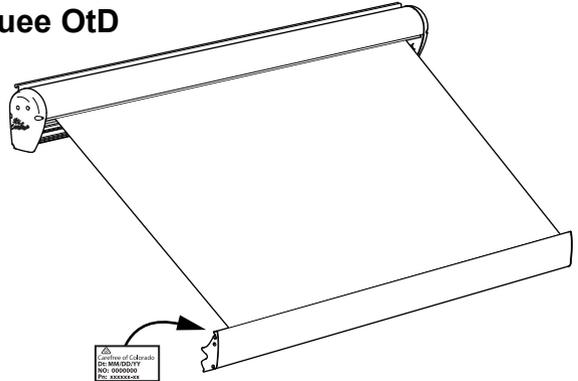

Typical for:


- ▶ Alpine
- ▶ Slideout Cover

Serial# / Part# Located on under Fabric on Roller Tube

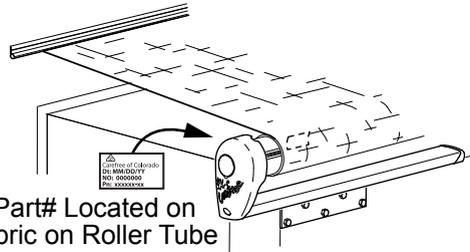


▶ Campout

Serial# / Part# Located on Bottom of Lead Rail

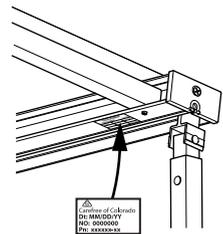

▶ Ascent

Part Number/Serial Number is located on the roller tube, inside of front cover and the underside of the slat.

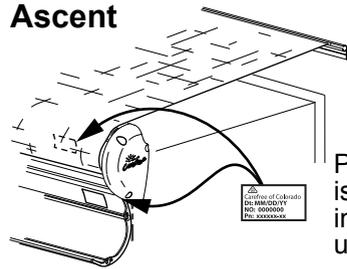

▶ SOKIII

Part Number/Serial Number is located on the deflector and under the fabric on the roller tube.

